





Living Scenery Projector Bundle



For optimal results, please read and follow instructions carefully
Please keep for future reference

experia **USA**
multisensory for everyone

 **WARNING: CHOKING HAZARD**
Small Parts: Not suitable for children
under 3 years.

 **3+ years**

Please follow all warnings on the product and within this manual. If upon receipt of this product, the user suspects that the product is defective, and/or requires service or repair due to malfunction or damage to the product, please contact the manufacturer immediately. Please be aware that improper installation and/or use or misuse of this product may result in injury, death, or adverse reactions to its user. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended uses of the product.

Mounting your Projector

Note: If you do not have a person on staff with experience installing projection equipment, we recommend that you hire a competent A/V Installer to complete the installation. Experia can even arrange for professional installation. Please call us for an estimate.

This instruction manual will provide basic guidance on where to place the projector. Refer to the projector, DVD player, and ceiling mount kit manuals for detailed guidance.

Determining where to mount the projector

Size of image: The size of the projected image will grow in proportion to the distance it is mounted from the wall. Once you determine where you want the image to be projected, measure the width and height of the available wall space. This will determine how far from the wall the projector will be mounted. The image width, height, and diagonal size are approximately as follows:

Distance From Wall	Width	Height	Diagonal
8 feet	59"	45"	74"
10 feet	74"	56"	93"
12 feet	89"	67"	112"
14 feet	104"	78"	130"

Note: There is a zoom function to allow fine-tuning of the image size once installed.

Location: Once you've determined the appropriate distance from the wall, you will determine the optimal placement of the projector. Your projector can be mounted off-center in order to have the option of mounting the projector out of the flow of "traffic" in the room, in order to minimize having people walking in the path of the picture. The image can then be corrected with both horizontal and vertical

"Keystone Correction". Please see the projector manual for details.

Type of Ceiling

Dropped Ceiling: If you have a dropped ceiling, You will have received a drop-ceiling installation kit with your projector.

Drywall Ceiling: If you have a drywall ceiling, you will have received a universal mounting kit designed for your type of ceiling: It will NOT include fasteners to attach to your joist - your installer will provide them.

Cleaning and Maintenance

WARNING: Always unplug the unit prior to cleaning! Clean with a damp soft cloth. A non abrasive cleaning agent may be used for stubborn stains. Make sure no liquid enters the motor.

Troubleshooting

Q. The unit doesn't work.

A1. Is the projector switched on? If so,

A2. Is the Wheel Rotator plugged into the socket underneath? If so,

A3. Please contact us for further assistance.

Contact Details

For USA please email: office@experia-usa.com

For UK and rest of the world email support@experia-innovations.co.uk

Telephone: (800) 882-4045

Please note: email is our support team's preferred communication and this takes precedence over telephone calls.

© Copyright 2010-2013 Experia
All rights reserved.
Experia is a registered trademark.